



S1 - Transmitter power switch  
 S2 - Pulsar Power Switch

S3 - Tone Pushbutton (high motor)  
 S4 - Carrier Pushbutton (low motor)

1 sec/cm  
 1/10 sec

50  
 8