


5/1/72

ERRATA SHEET FOR MODEL S540-T ASSEMBLY INSTRUCTIONS

1. Install two wire jumpers on the Tx logic board in place of diodes CR1 and CR2.
2. In place of R1 (10K) install a 47K resistor.
3. Install a 100K resistor in place of R4 (47K).
4. Do not install the following .02 disc capacitors in the P.C. board: C12, C16, C20, C24, C28, C32.
5. Omit capacitor C3 (.01UF).
6. Install 27K resistors for R11, R15, R19, R23, R27 and R31 (were 47K).

Note: Above changes are made to eliminate possible servo interaction.

7. Sticks now supplied with this Tx have new style pots which gives them a different physical appearance. All connections are the same as shown in the manual.
8. Install 2N3565 transistors in place of all 2N5134 transistors.
9. In the event your transmitter is to be used with an external charger, omit charging resistor R36, diode CR16 and the AC charge receptacle. Wire as shown below:

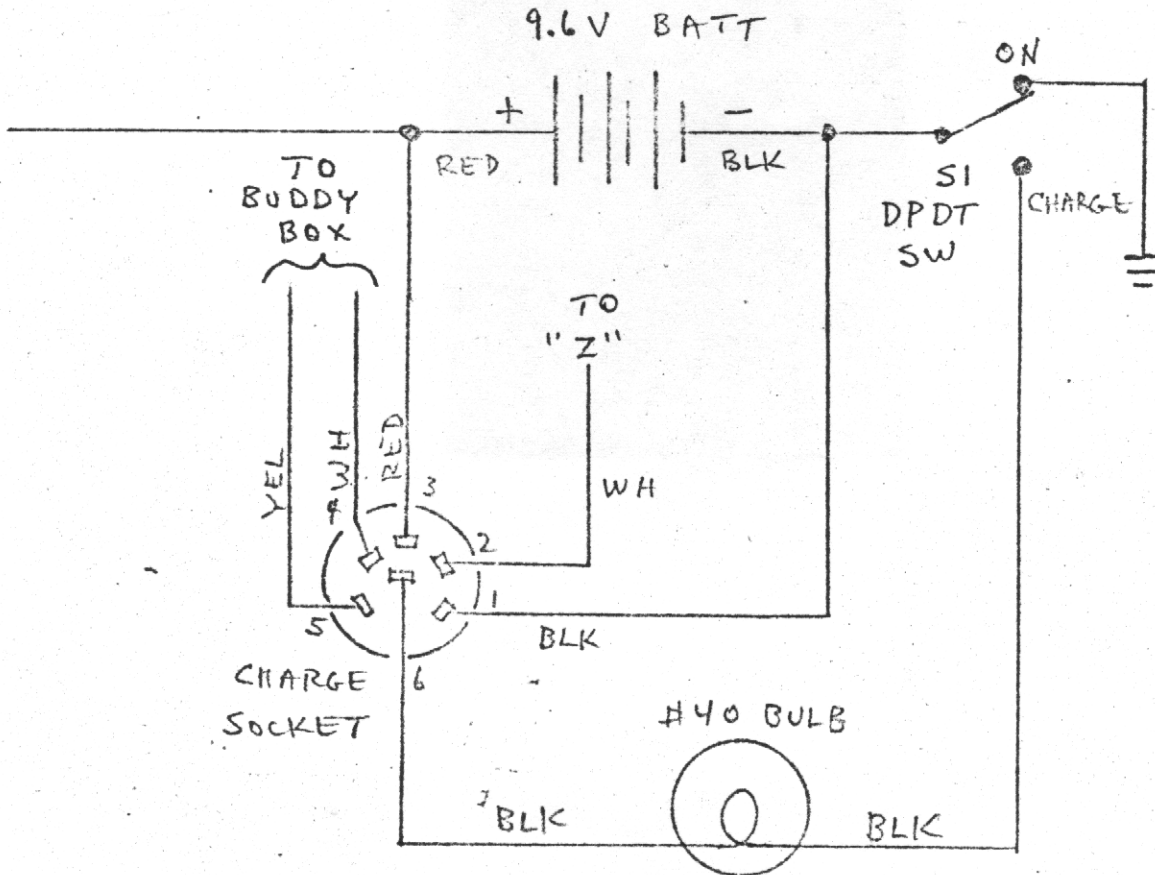

Install a cover plate over the square opening for the AC charge receptacle.